



KITCHEN *Living*

## reversible grill and griddle

USER GUIDE



Now that you have purchased a Kitchen Living product you can rest assured in the knowledge that as well as your 2 year parts and labor guarantee you have the added peace of mind of dedicated helplines and web support.

### AFTER SALES SUPPORT

 USA 1-888-367-7373  [customer-service@wk-usa.com](mailto:customer-service@wk-usa.com)

MODEL: DF-608B, 01/13, 3878-13

# Contents

---

03	Introduction
04	General Information and Safety Instructions
06	Assembly and Parts List
07	Getting Started
08	Features
09	Instructions
10	FAQ
11	Other Useful Information
12	Warranty Card



Congratulations!

You have made an excellent choice with the purchase of the quality Kitchen Living product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Kitchen Living product is backed by a comprehensive manufacturer's 2 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 2 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your till receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.



# General Information and Safety Instructions

# 4

When using electrical appliances, basic safety precautions should always be followed.

## Please read and save all instructions.

1. To protect against electrical shock, do not immerse grill/griddle, probe, power cord, or plug in water or any other liquid.
2. If the power cord is damaged, the manufacturer or qualified electrician must replace it in order to avoid hazard.
3. Do not use outdoors or while standing in a damp area. For household use only. Do not leave the Grill/Griddle unattended.
4. Close supervision is necessary when any appliance is being used by or near children. This Grill/Griddle is not for use by children.
5. Do not operate the Grill/Griddle with a damaged power cord or plug or after it has malfunctioned or is dropped or damaged in any manner. Return the Grill/Griddle to the warranty center for examination, repair, or electrical or mechanical adjustment.
6. Do not use any other temperature probe other than what is provided by the manufacturer.
7. Do not let the power cord hang over the edge of a table or counter or touch any hot surface.
8. Do not use the appliance for other than intended use.
9. Do not place on or near hot gas or electric burner, or in a heated oven.
10. Always attach the temperature probe to the Grill/Griddle before plugging cord into the wall outlet.
11. To disconnect, turn the temperature probe knob to "O" OFF, then remove the plug from the wall outlet. Never leave the Grill/Griddle connected to the power outlet when not in use or when cleaning.
12. Do not clean the Grill/Griddle with metal scouring pads. Pieces can break off from the pad and touch electrical parts, creating a risk of electrical shock.
13. Caution should be taken when handling this Grill/Griddle during and immediately after cooking. Do not touch hot surfaces. Always use handles.
14. Do not move this Grill/Griddle when in use.
15. When in use, keep the Grill/Griddle a minimum of 10-12 inches away from walls and do not use under any overhand such as a cupboard. Place on a stable, horizontal, heat resistant surface in a well ventilated area. The temperature of nearby surfaces may become hot when the Grill/Griddle is operating.
16. For life-long performance of the Grill/Griddle, avoid dropping anything on the heating element.
17. Use only suitable utensils for non-stick surfaces to avoid scratching the surface.
18. **ALWAYS ALLOW THE GRILL/GRIDDLE TO COOL COMPLETELY BEFORE CLEANING.** Remove the temperature probe before cleaning.

**SAVE ALL INSTRUCTIONS!**



## **WARNING!**

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instruction discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

## **CAUTION:**

A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125V, and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

## **POLARIZED PLUG**

### **NOTE:**

- This Grill/Griddle has a polarized plug (one blade is wider than the other).
- As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.
- If the plug does not fit fully in the outlet, reverse the plug.
- If the plug still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## **ELECTRIC POWER**

If electric circuit is overloaded with other appliances, your Grill/Griddle may not operate properly. The Grill/Griddle should be operated on a separate electrical circuit from other operating appliances.



## **SAFETY WARNING**

Although your Grill/Griddle is easy to operate, for your safety, the warnings below must be followed:

1. Do not place the Grill/Griddle near a heat source.
2. Never leave the Grill/Griddle unattended while connected to the electrical outlet.
3. Use the Grill/Griddle on a stable work surface.
4. Do not unplug from the wall socket by pulling on the supply cord.
5. The appliance must be unplugged:
  - A. After use.
  - B. If it appears to be faulty.
  - C. Before cleaning or maintenance.
6. Extreme caution must be used when moving the Grill/Griddle if it contains hot oil or other hot liquids.

**THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.**

**SAVE THESE INSTRUCTIONS!**




# Assembly and Parts List

# 6

## LIST OF MAIN PARTS

1. Handles
2. Temperature Probe
3. Reversible Grill/Griddle Plate
4. Base

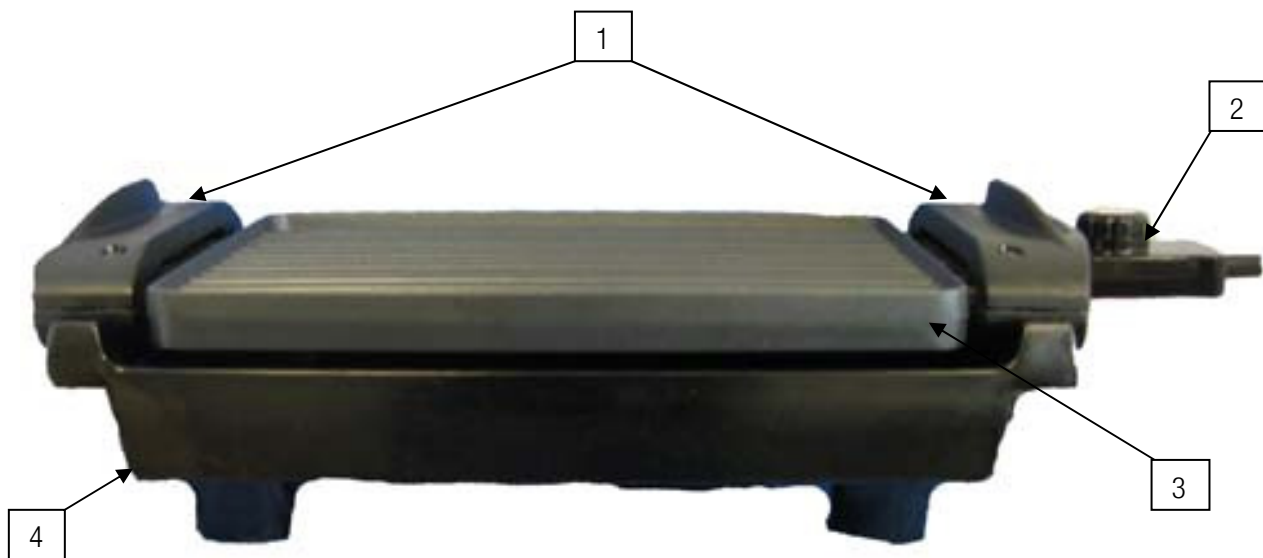

## CONTENTS OF PACKAGING

- Reversible Grill/Griddle with attached Temperature Probe Receptacle
- Temperature Probe
- Base
- Instruction Manual

If any of the above items are missing, please contact our service department at 1-888-367-7373 or email us at [customer-service@wk-usa.com](mailto:customer-service@wk-usa.com) for replacement. Our business hours are Monday through Friday 9:00am to 4:00pm CST.

## BEFORE FIRST USE

Before initial use, please wipe down the Grill/Griddle with a soft damp cloth and make sure there is no metal or foreign objects on the temperature probe. NOTE: During first use, the Grill/Griddle may give off a slight odor. This is due to the newness of the product and will dissipate with use.

## SET UP BEFORE USE

1. Unpack the Grill/Griddle and other necessary parts from the box.
2. Remove any unwanted packaging materials such as cardboard, plastics or styrofoam.
3. Wipe clean all the parts with a soft damp cloth or sponge. Rinse and dry thoroughly.

**DO NOT USE ANY ABRASIVE MATERIALS TO CLEAN THE SURFACE**

**DO NOT IMMERSE THE GRILL/GRIDDLE AND/OR THE TEMPERATURE PROBE IN WATER OR ANY OTHER LIQUIDS.**

4. Assemble all the parts to the Grill/Griddle.
5. Place base on a heat resistant stable surface in a well ventilated area.
6. Select ribbed grill side or smooth griddle side and place it on the base.
7. Make sure the temperature probe is turned to "O" OFF. Insert temperature probe into the receptacle in the handle. Plug the power supply cord into a wall outlet.





Power / Temperature Indicator Light

Griddle Plate



Grill Plate



Cool Touch Handles



**THIS APPLIANCE CAN GET HOT DURING USE. PLEASE USE CAUTION!**

## HOW TO USE THE REVERSIBLE GRILL/GRIDDLE

1. Adjust the temperature probe to the desired temperature. NOTE: The power indicator light is also the temperature indicator for the grill/griddle.
2. Allow the unit to preheat 7 – 10 minutes. Place food directly on the Grill/Griddle. Cook food to desired doneness.
3. When cooking is finished, turn the temperature control knob to “O” OFF and remove the plug from the wall outlet.
4. **IMPORTANT:** Wait until the Grill/Griddle has cooled down completely before removing the temperature probe, or attempting to clean the unit.

## CAUTION

5. Hot oil and liquid may splash as grease and juices hit the drip tray. BE CAREFUL WHILE GRILLING!
6. DO NOT TOUCH any hot surfaces while cooking. The grill or griddle may become extremely hot while cooking and will remain hot while unit is cooling down.
7. DO NOT overload the grill/griddle surface.
8. DO NOT remove the temperature probe until the grill/griddle is turned OFF, unplugged and completely cooled.
9. DO NOT move the Grill/Griddle while in use.

**DO NOT** touch hot surfaces. Always use handles.

**ALWAYS** make sure that the unit is set to the “O” OFF position when not in use and when unplugging from power outlet.

**CAUTION: BE CAREFUL NOT TO TOUCH THE BASE UNIT AFTER COOKING AS IT REMAINS HOT!**



**COOKING TIPS**

- If using bamboo or wooden skewers, soak skewers in water at least 30 minutes before use to prevent burning.
- Use only nylon, plastic, or wooden utensils to avoid scratching the non-stick surface. Never cut food on the non-stick surface.
- Cut food into small and equal pieces to ensure more even cooking.
- Frozen food should always be thawed before it is grilled.
- If you grill vegetables, fish or lean meat, spray the grilling surface with a cooking spray. If you are grilling meat with any amount of fat, or if the food has been marinated, there is no need to treat the grill prior to cooking.
- If using a marinade with oil, place grill near an exhaust hood. Oil or fat may produce smoke.

**COOKING GUIDE**

FOOD	APPROXIMATE COOKING TIME	TEMPERATURE
Fish	10-15 minutes	300 F
Bacon	10-15 minutes	275 F
Sausage links	20 minutes	275 F
Hamburgers	15-20 minutes	325 F
Hot dogs	15 minutes	300 F
Chicken Breast	15-20 minutes each side	325 F
Pork Chops with Bone	10-12 minutes each side	300 F
Steak (rare)	4-6 minutes each side Depending on thickness	350 F
Steak (well done)	7-9 minutes each side Depending on thickness	350 F

**Note:** This chart is for your reference only. You may need to adjust cooking time and temperature according to the type, size, thickness of food and your own personal taste preference.



## SERVICE CENTER

If you have any questions in regards to the operation of this appliance or are in need of a spare part, please contact our service center at:

Wachsmuth & Krogmann, Inc.

Tel: 1-888-367-7373

Business Hours: Mon-Fri 9:00am – 4:00pm CST

Email: [customer-service@wk-usa.com](mailto:customer-service@wk-usa.com)

## TECHNICAL INFORMATION

- Model Number: DF-608B
- Rating Voltage: 120V, 60Hz
- Nominal Power: 1400 Watt

## MAINTENANCE

### CAUTION:

Always be sure that the Grill/Griddle is unplugged and completely cooled before cleaning or attempting to store the item.

1. When performing any cleaning or maintenance to this unit, **turn the temperature probe to “O” OFF and be sure to unplug from the power outlet first and allow item to cool completely before removing the temperature probe.**
2. Remove the temperature probe from the unit. Gently remove the completely cooled grill/griddle and clean the surface and outer surface using a soft cloth or sponge and warm soapy water. NEVER IMMERSE THE GRILL/GRIDDLE OR TEMPERATURE PROBE IN WATER OR ANY OTHER LIQUID.
3. Allow the base to cool completely before cleaning. Once cooled, clean the base with a soft cloth or sponge and warm soapy water. The base may be immersed in water. Do not place the base in the dishwasher.
4. Remove stubborn stains or cooked on food with a plastic scouring pad and mild dish washing liquid.

## STORING

- Allow the Grill/Griddle to cool completely before storing.
- Store the Grill/Griddle in a dry location in the original box if possible.
- Do not place any heavy items on top of Grill/Griddle during storage as this may result in possible damage.
- Store the cord in a clean, dry location away from metal objects. Always check the plug before use to assure metal items have not become attached.

## ENVIRONMENTAL PROTECTION

If the Grill/Griddle should no longer work at all, please make sure that it is disposed of in an environmentally friendly way.



KITCHEN *Living*

# reversible grill and griddle

Your details:

Name \_\_\_\_\_

Address \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_



Email: \_\_\_\_\_

Date of purchase\* \_\_\_\_\_

\*We recommend you keep the receipt with this warranty card

Location of purchase \_\_\_\_\_

Description of malfunction:

Return your completed warranty card to:

Wachsmuth & Krogmann, Inc.  
621 IL Route 83  
Suite 202  
Bensenville, IL 60106  
United States  
customer-service@wk-usa.com

## AFTER SALES SUPPORT



USA

1-888-367-7373



customer-service@wk-usa.com

MODEL: DF-608B, 01/13, Item #3878-13

Phone lines available Monday to Friday, 9am – 4pm  
CST

**2**

YEAR WARRANTY