



KITCHEN *Living*

milkshake maker USER GUIDE



Now that you have purchased a Kitchen Living product you can rest assured in the knowledge that as well as your 2 year parts and labor guarantee you have the added peace of mind of dedicated helplines and web support.

AFTER SALES SUPPORT

  1-888-367-7373  customer-service@wk-usa.com

MODEL: JB-218, 5/28/2014, 6136-14

Contents

03	Introduction
04	General Information and Safety Instructions
06	Assembly and Parts List
07	Getting Started
08	Instructions
10	Other Useful Information
11	Warranty Card



Congratulations!

You have made an excellent choice with the purchase of the quality Kitchen Living product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Kitchen Living product is backed by a comprehensive manufacturer's 2 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 2 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.



General Information and Safety Instructions

4

When using electrical appliances, basic safety precautions should always be followed.

Please read and save all instructions before using the Milkshake Maker.

1. To protect against electrical shock, do not immerse power cord, plug or milkshake maker base in water or any other liquid.
2. Always operate this unit on a flat stable surface.
3. Do not use the milkshake maker for other than intended use. Do not use outdoors. For household use only.
4. Close supervision is necessary when any appliance is being used by or near children. This milkshake maker is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the milkshake maker by a person responsible for their safety.
5. Never leave the milkshake maker unattended while it is operating.
6. Always unplug this unit from the electrical outlet when not in use, before cleaning, and before putting on or taking off the attachments.
7. Do not operate the milkshake maker with a damaged power cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the milkshake maker to the warranty center for examination, repair, or electrical or mechanical adjustment. See warranty page. Do not attempt to repair the milkshake maker yourself.
8. Do not let the power cord hang over the edge of a table or counter or touch any hot surface.
9. The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury.
10. Do not place the milkshake maker on or near hot gas or electric burner, or in a heated oven.
11. Keep hands, clothing, as well as spatulas and other utensils away from mixing shaft during operation to reduce the risk of injury to persons, and/or damage to the milkshake maker. Always avoid contact with moving parts.
12. Do NOT use this milkshake maker as an ice crusher as you may damage the mixing shaft and/or the motor.
13. Never add to the container while the milkshake maker is operating.
14. The container must be securely in place before operating.
15. Do NOT blend hot liquids.

WARNING!

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instruction discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

SAVE ALL INSTRUCTIONS!



CAUTION:

A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125V, and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG

NOTE:

- This milkshake maker has a polarized plug (one blade is wider than the other).
- As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.
- If the plug does not fit fully in the outlet, reverse the plug.
- If the plug still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.



SAFETY WARNING

Although your milkshake maker is easy to operate, for your safety, the warnings below must be followed:

1. Do not place the milkshake maker near a heat source.
2. Never leave the milkshake maker unattended while connected to the electrical outlet.
3. Use the milkshake maker on a stable work surface away from water.
4. Do not unplug from the wall socket by pulling on the supply cord.
5. The milkshake maker must be unplugged:
 - A. After each use.
 - B. If it appears to be faulty.
 - C. Before cleaning or maintenance.


THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS!



LIST OF MAIN PARTS

1. Stainless steel mixing cup
2. Removable mixing shaft
3. Tilting head
4. Milkshake maker base with power switch
5. Cup support and rest

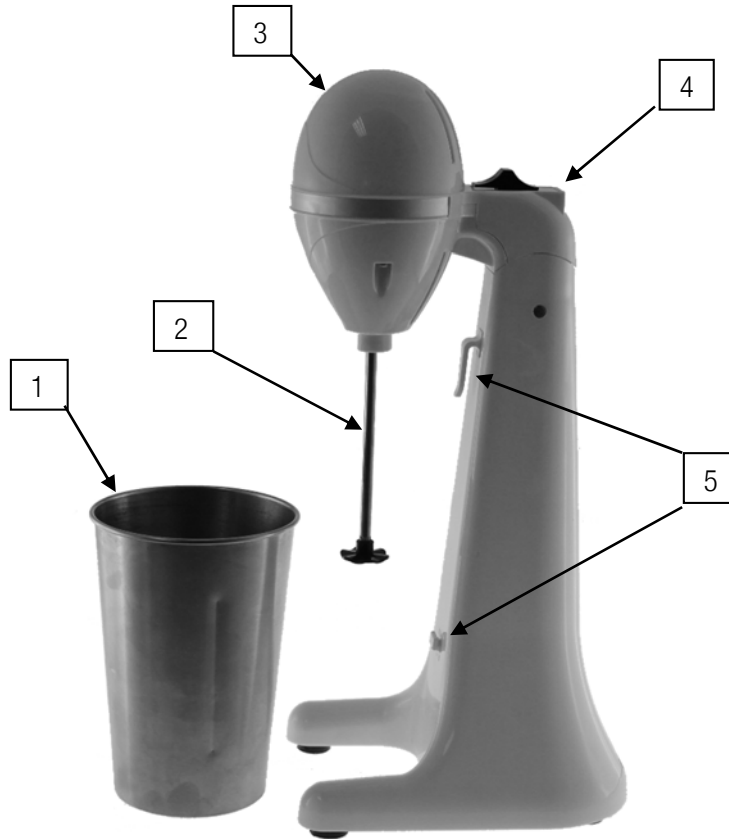

CONTENTS OF PACKAGING

- Milkshake maker base with mixing shaft
- Stainless steel mixing cup
- Instruction manual

If any of the above items are missing, please contact our service department at 1-888-367-7373 or email us at customer-service@wk-usa.com for replacement. Our business hours are Monday through Friday 10:00am to 5:00pm EST.

BEFORE THE FIRST USE

1. Unpack the milkshake maker from the box.
2. Remove any unwanted packaging materials such as cardboard, plastics or styrofoam.
3. Tilt the head back and pull down gently but firmly on the mixing shaft. After cleaning the shaft, tilt the head back and gently but firmly push the shaft back into place until you hear a soft snap.
4. Wipe clean all the parts with a soft damp cloth or sponge and warm water. Rinse and dry thoroughly. **DO NOT IMMERSE THE MILKSHAKE MAKER BASE IN WATER OR ANY OTHER LIQUID.**

DO NOT USE ANY ABRASIVE MATERIALS TO CLEAN THE SURFACE

DO NOT IMMERSE THE MILKSHAKE MAKER BASE INTO WATER AT ANY TIME



HOW TO USE THE MILKSHAKE MAKER

- Place your ingredients into the stainless steel cup. Please note that there are indentations on the cup that show a minimum height and a maximum height for your ingredients. If the minimum height is not reached the mixing shaft will not be able to work properly. If the ingredients go past the maximum height indentation the ingredients may overflow while mixing.
- Place the cup under the top support clip and let it rest on the bottom rest clip



- Make sure the power switch is OFF, plug the power cord into an electrical outlet, and switch to LOW (1). After 10 seconds you can switch to HIGH (2) if needed.
- If you are using very hard ice cream or if the shake is very thick you may carefully remove the cup from the support and rest clips and with the mixing shaft still submerged in the shake move the cup around a little for more thorough mixing.
- When finished, switch the power switch to OFF, remove the cup (using the tilt head feature if needed) and pour your shake into a glass and serve.
- Unplug the milkshake maker when not in use.

HELPFUL HINTS

- Most drinks can be mixed in less than 2 minutes.
- Whole fruit should not be used when making fruit drinks. Mash or puree your fruit first, add it to the ingredients, then mix.
- For best results, all liquid ingredients should be as cold as possible. Milk drinks will taste best if milk is very cold. The colder the milk, the thicker and more frothy the drink.
- All syrups and powdered mixes should be added just before mixing to prevent it from sinking to the bottom of the cup.
- The cup must always be filled to at least the minimum level mark or the liquid will not reach the mixing shaft.
- When mixing thin mixtures do not fill above the maximum level mark or the liquid could overflow while mixing.
- DO NOT use the milkshake maker to crush ice.
- Add your favorite ice cream and flavorings to milk to make your own delicious combinations.

WARNINGS

DO NOT use as an ice crusher.

ALWAYS keep fingers and utensils away from the mixing shaft.

ALWAYS make sure that the milkshake maker is unplugged from the power outlet when not in use.

ALWAYS make sure the mixing shaft is placed securely in the tilt head before you begin mixing.



SERVICE CENTER

If you have any questions in regards to the operation of this Milkshake Maker or are in need of a spare part, please contact our service center at:

Wachsmuth & Krogmann, Inc.

Tel: 1-888-367-7373

Business Hours: Mon-Fri 10:00am – 5:00pm EST

Email: customer-service@wk-usa.com

TECHNICAL INFORMATION

- Model Number: JB-218
- Rating Voltage: 120V, 60Hz
- Nominal Power: 70 Watt

MAINTENANCE

1. When performing any cleaning or maintenance to this unit, **be sure to unplug from power outlet first.**
2. Wipe the outer surface of the milkshake maker base with a warm damp cloth and dry with a soft cloth.
3. Remove the mixing shaft as specified earlier and hand wash in warm soapy water and dry thoroughly before replacing the mixing shaft into the tilt head..
4. Do not immerse the base in water or any other liquid.
5. It is recommended that you hand wash the stainless steel cup but you can use the top rack of the dishwasher if needed.

STORING

- Always unplug the milkshake maker before storing.
- Store the milkshake maker in a dry location in the original box if possible.
- Do not place any heavy items on top of the milkshake maker during storage as this may result in possible damage.

ENVIRONMENTAL PROTECTION

If the milkshake maker should no longer work at all, please make sure that it is disposed of in an environmentally friendly way.

KITCHEN *Living* milkshake maker

Your details:

Name _____

Address _____



_____ E mail _____

Date of purchase* _____

* We recommend you keep the receipt with this warranty card

Location of purchase _____

Description of malfunction:

If you have a malfunction please contact our

Customer Service department and send this
completed warranty card with the receipt to:

Wachsmuth & Krogmann, Inc.

621 IL Route 83

Suite 202

Bensenville, IL 60106

United States

customer-service@wk-usa.com

AFTER SALES SUPPORT



1-888-367-7373



customer-service@wk-usa.com

MODEL: JB-218, 5/28/2014, 6136-14

Phone lines available Monday thru Friday,
10am - 5pm EST.

2

YEAR WARRANTY