



KITCHEN *Living*

personal drink mixer USER GUIDE



Now that you have purchased a Kitchen Living product you can rest assured in the knowledge that as well as your 2 year parts and labor guarantee you have the added peace of mind of dedicated helplines and web support.

AFTER SALES SUPPORT



USA

1-888-367-7373



customer-service@wk-usa.com

MODEL: BL-05, 01/08/14, 43151-14

Contents

03	Introduction
04	General Information and Safety Instructions
06	Assembly and Parts List
07	Getting Started
08	Features
09	Instructions
10	Recipes
12	Other Useful Information
13	Warranty Card



Congratulations!

You have made an excellent choice with the purchase of the quality Kitchen Living product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Kitchen Living product is backed by a comprehensive manufacturer's 2 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 2 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.



General Information and Safety Instructions

4

When using electrical appliances, basic safety precautions should always be followed.

Please read and save all instructions before using the Personal Drink Mixer.

1. To protect against electrical shock, do not immerse power cord, plug or drink mixer base in water or any other liquid.
2. Always operate this unit on a flat stable surface.
3. Do not use the drink mixer for other than intended use. Do not use outdoors. For household use only.
4. Close supervision is necessary when any appliance is being used by or near children. This drink mixer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the drink mixer by a person responsible for their safety.
5. Never leave the drink mixer unattended while it is operating.
6. Always unplug this unit from the electrical outlet when not in use, before cleaning, and before putting on or taking off the attachments.
7. Do not operate the drink mixer with a damaged power cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the drink mixer to the warranty center for examination, repair, or electrical or mechanical adjustment. See warranty page. Do not attempt to repair the drink mixer yourself.
8. Do not let the power cord hang over the edge of a table or counter or touch any hot surface.
9. The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury.
10. Do not place the drink mixer on or near hot gas or electric burner, or in a heated oven.
11. Keep hands, clothing, as well as spatulas and other utensils away from blades during operation to reduce the risk of injury to persons, and/or damage to the drink mixer. Always avoid contact with moving parts.
12. Do NOT use this drink mixer as an ice crusher as you may damage the blades and/or the motor. Use ice sparingly.
13. Never operate this unit when the cup is empty and do not remove the blade assembly before the blades come to a complete stop.
14. The blades are sharp. Use extreme caution when handling the cutting blades, especially when removing the blade assembly from the bottle, emptying the bottle, and during cleaning.
15. Never place the blade assembly on the drink mixer base without the bottle properly attached.
16. Do NOT blend hot liquids.

WARNING!

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instruction discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

SAVE ALL INSTRUCTIONS!



CAUTION:

A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125V, and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG

NOTE:

- This drink mixer has a polarized plug (one blade is wider than the other).
- As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.
- If the plug does not fit fully in the outlet, reverse the plug.
- If the plug still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.



SAFETY WARNING

Although your drink mixer is easy to operate, for your safety, the warnings below must be followed:

1. Do not place the drink mixer near a heat source.
2. Never leave the drink mixer unattended while connected to the electrical outlet.
3. Use the drink mixer on a stable work surface away from water.
4. Do not unplug from the wall socket by pulling on the supply cord.
5. The drink mixer must be unplugged:
 - A. After each use.
 - B. If it appears to be faulty.
 - C. Before cleaning or maintenance.

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS!



LIST OF MAIN PARTS

1. Blade assembly
2. Spill-proof lid (2)
3. Bottle (2)
4. Drink mixer base



CONTENTS OF PACKAGING

- Drink mixer base
- Blade assembly
- 2 bottles with lids
- Instruction manual with recipes

If any of the above items are missing, please contact our service department at 1-888-367-7373 or email us at customer-service@wk-usa.com for replacement. Our business hours are Monday through Friday 9:00am to 4:00pm CST.

BEFORE THE FIRST USE

1. Unpack the drink mixer from the box.
2. Remove any unwanted packaging materials such as cardboard, plastics or styrofoam.
3. Wipe clean all the parts with a soft damp cloth or sponge and warm water. Rinse and dry thoroughly. **DO NOT IMMERSE THE DRINK MIXER BASE IN WATER OR ANY OTHER LIQUID.**

DO NOT USE ANY ABRASIVE MATERIALS TO CLEAN THE SURFACE

DO NOT IMMERSE THE DRINK MIXER BASE INTO WATER AT ANY TIME






MAX fill line
on bottle



Spill proof
lid




Stainless
steel blade
assembly

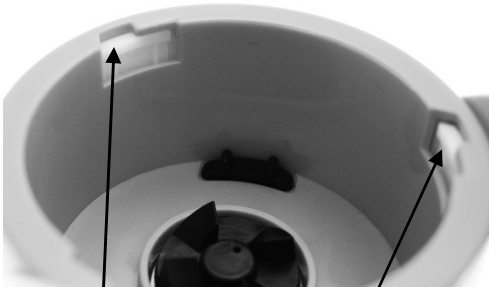

Notches on base allow for one touch
operation (push down) or hands free
operation (twist clockwise to lock in place)

HOW TO USE THE DRINK MIXER

1. Place the drink mixer base on a flat stable surface near an electrical outlet.
2. Place the open bottle on a flat surface and add your favorite ingredients to the bottle. Please note that you must not fill the bottle above the MAX fill line on the bottle.
3. Place the blade assembly on the bottle and screw it securely onto the bottle.
4. Turn the bottle upside down and place the blade assembly onto the drink mixer base.
5. Line up the flanges on the bottle with the notches on the drink mixer base.

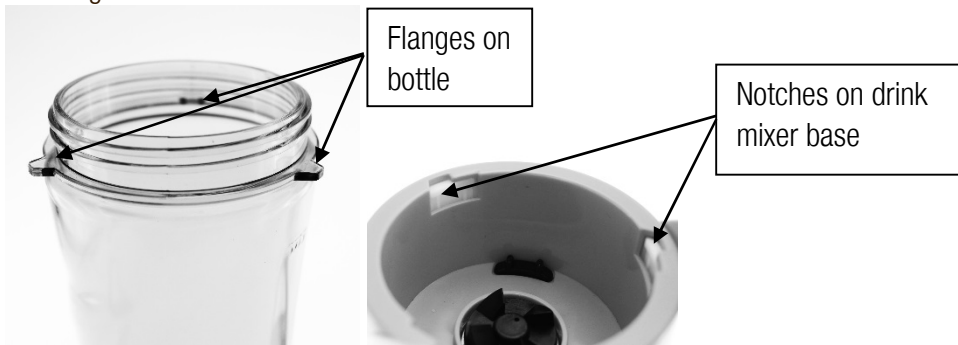

6. To pulse, push the bottle down and the blades will engage.
7. If a longer period of blending is required or you want a hands-free operation you may push down on the bottle and turn it slightly clockwise to lock the flanges into the notches.
8. Please note that you should never run the drink mixer for more than 3 continuous minutes. It must be unplugged and allowed to cool off before you use it again.
9. To stop the blending, stop pressing down on the bottle or turn counter-clockwise and unlock the flanges.
10. When blending is complete turn the bottle over, carefully remove the blade assembly and put the drinking lid on. It is now ready for use or to go.
11. DO NOT use for ice crushing as this may damage the blades or the motor.
12. You may use several small ice cubes to make your drinks but it may take longer to blend.
13. Frozen fruits or frozen juices may be used for added flavor and to add coldness to your drinks.
14. This unit is for use with cool liquids, yogurt, ice cream, soft fruits and vegetables. Please cut up your fruits and vegetables into smaller pieces before adding them to your bottle for blending.
15. If the unit is overloaded it will automatically stop. If this happens please unplug the power supply cord, empty cup, and wait 15 minutes to allow the motor to cool down before using again. Use less quantities of your ingredients when you use again.

WARNINGS

DO NOT use as an ice crusher.

ALWAYS keep fingers and utensils away from the sharp blades.

ALWAYS make sure that the drink mixer is unplugged from the power outlet when not in use.

ALWAYS make sure the blade assembly is placed securely on the bottle before you begin blending.

You may mix and match your favorite ingredients to make delicious and nutritious smoothies to drink throughout your day or to take with you. Add your ingredients to the bottle, attach the blade assembly securely to the bottle, turn it upside down and blend using the pulse option or the hands-free option for anywhere from 20 to 45 seconds or until your ingredients are blended to the desired consistency. Additional recipes and ideas can be found online or at your local library or bookstore.

Anti-Stress Smoothie

1 cup vanilla soymilk
1 banana, sliced
 $\frac{3}{4}$ cup frozen blueberries
 $\frac{1}{2}$ cup vanilla frozen yogurt

Morning Berry Smoothie

1 cup milk
 $\frac{1}{4}$ teaspoon vanilla
 $\frac{1}{4}$ cup old fashioned oats
1 cup frozen mixed berries
1 container (6 ounces) plain yogurt
1 teaspoon sugar (optional)

Berry Banana Smoothie

1 cup vanilla, plain, strawberry or raspberry yogurt
 $\frac{1}{2}$ cup round oat cereal
2 tablespoons ground flaxseed or flaxseed meal (optional)
 $\frac{1}{2}$ cup fresh or frozen strawberry halves or raspberries
 $\frac{1}{2}$ cup milk
 $\frac{1}{2}$ banana, sliced
1 to 2 tablespoons sugar (optional)

Mango Smoothie

1 mango, seed removed, peeled and chopped (approx. 1 cup) or 1 cup frozen mango pieces
1 cup mango or orange sorbet
1 container (6 ounces) vanilla or plain yogurt
 $\frac{3}{4}$ cup milk



Cranberry Orange Smoothie

1 ½ cups orange juice
1 cup fresh or frozen sliced peaches, cut in half
¼ cup whole berry cranberry sauce

Icy Hot Chocolate

1 cup milk
2 tablespoons hot cocoa mix
Several small ice cubes (you may delete ice cubes if you use frozen yogurt – see below)
¾ cup chocolate ice cream (or your favorite kind)
1 container (6 ounces) vanilla yogurt (can use frozen yogurt if desired)

Tropical Smoothie

1 cup milk
¼ cup unsweetened coconut milk
¾ cup fresh or frozen chopped pineapple
¾ cup fresh or frozen chopped mango
1 tablespoon honey (optional)

Strawberry Mango Smoothie

1 cup apricot nectar
½ cup fresh or frozen chopped mango
½ cup fresh or frozen strawberries
1 container (6 ounces) vanilla yogurt.

Pomegranate Berry Smoothie

¾ cup pomegranate juice
½ cup milk
1 cup fresh or frozen blueberries
½ cup raspberry sherbet
2 tablespoons honey (optional)

For additional nutrition add spinach, kale, cooked beets or broccoli and/or used reduced fat (2%) or skim milk.

For added protein you may add 1-2 tablespoons peanut butter, egg white powder, or whey protein.



SERVICE CENTER

If you have any questions in regards to the operation of this Personal Drink Mixer or are in need of a spare part, please contact our service center at:

Wachsmuth & Krogmann, Inc.

Tel: 1-888-367-7373

Business Hours: Mon-Fri 9:00am – 4:00pm CST

Email: customer-service@wk-usa.com

TECHNICAL INFORMATION

- Model Number: BL-05
- Rating Voltage: 120V, 60Hz
- Nominal Power: 300 Watt

MAINTENANCE

1. When performing any cleaning or maintenance to this unit, **be sure to unplug from power outlet first.**
2. Wipe the outer surface of the drink mixer base with a warm damp cloth and dry with a soft cloth.
3. Hand wash the blade assembly very carefully in warm soapy water and dry thoroughly.
4. Hand wash the bottles and lids in warm soapy water and dry thoroughly. The bottles and lids are also top rack dishwasher safe.

STORING

- Always unplug the drink mixer before storing.
- Store the drink mixer in a dry location in the original box if possible.
- Do not place any heavy items on top of the drink mixer during storage as this may result in possible damage.

ENVIRONMENTAL PROTECTION

If the drink mixer should no longer work at all, please make sure that it is disposed of in an environmentally friendly way.

KITCHEN *Living*

personal drink mixer

Your details:

Name _____

Address _____



_____ E mail _____

Date of purchase* _____

* We recommend you keep the receipt with this warranty card

Location of purchase _____

Description of malfunction:

If you have a malfunction please contact our
Customer Service department and send this
completed warranty card with the receipt to:

Wachsmuth & Krogmann, Inc.

621 IL Route 83

Suite 202

Bensenville, IL 60106

United States

customer-service@wk-usa.com

AFTER SALES SUPPORT



1-888-367-7373



customer-service@wk-usa.com

MODEL: BL-05, 01/08/14, 43151-14

Phone lines available Monday thru Friday,
9am - 4pm CST.

2

YEAR WARRANTY